CABIN AIR FILTERS

Dust & Pollen Filter - Civic, Civic Hybrid, CR-V

REMOVAL & INSTALLATION

NOTE: Manufacturer's terminology for this filter is dust and pollen filter.

CABIN AIR FILTER

Removal & Installation

1. Open the glove box. Remove the glove box stop (B) on each side, then let the glove box hang down. See **Fig. 1**.

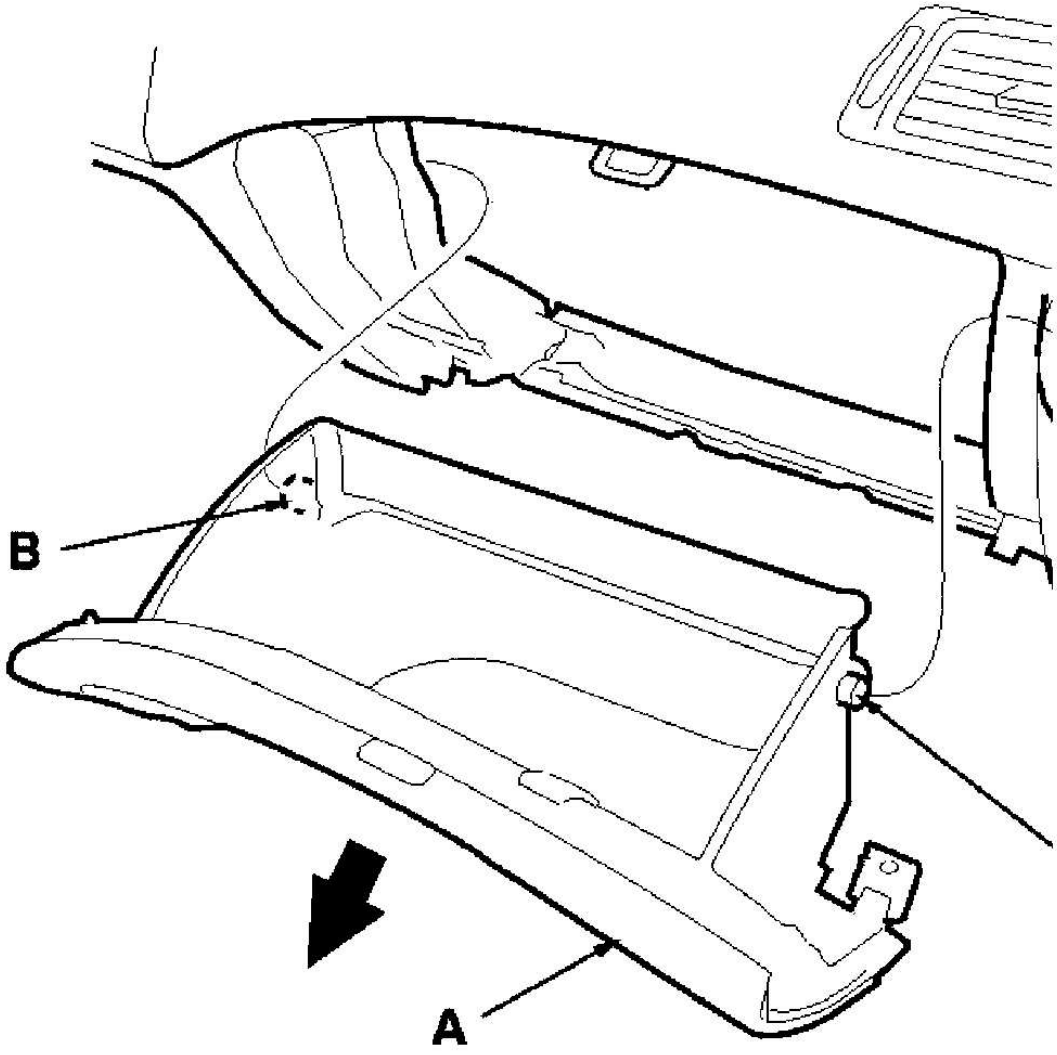

Fig. 1: Locating Glove Box Stops
Courtesy of AMERICAN HONDA MOTOR CO., INC.

2. Remove the dust and pollen filter assembly (A) from the evaporator. See **Fig. 2**.

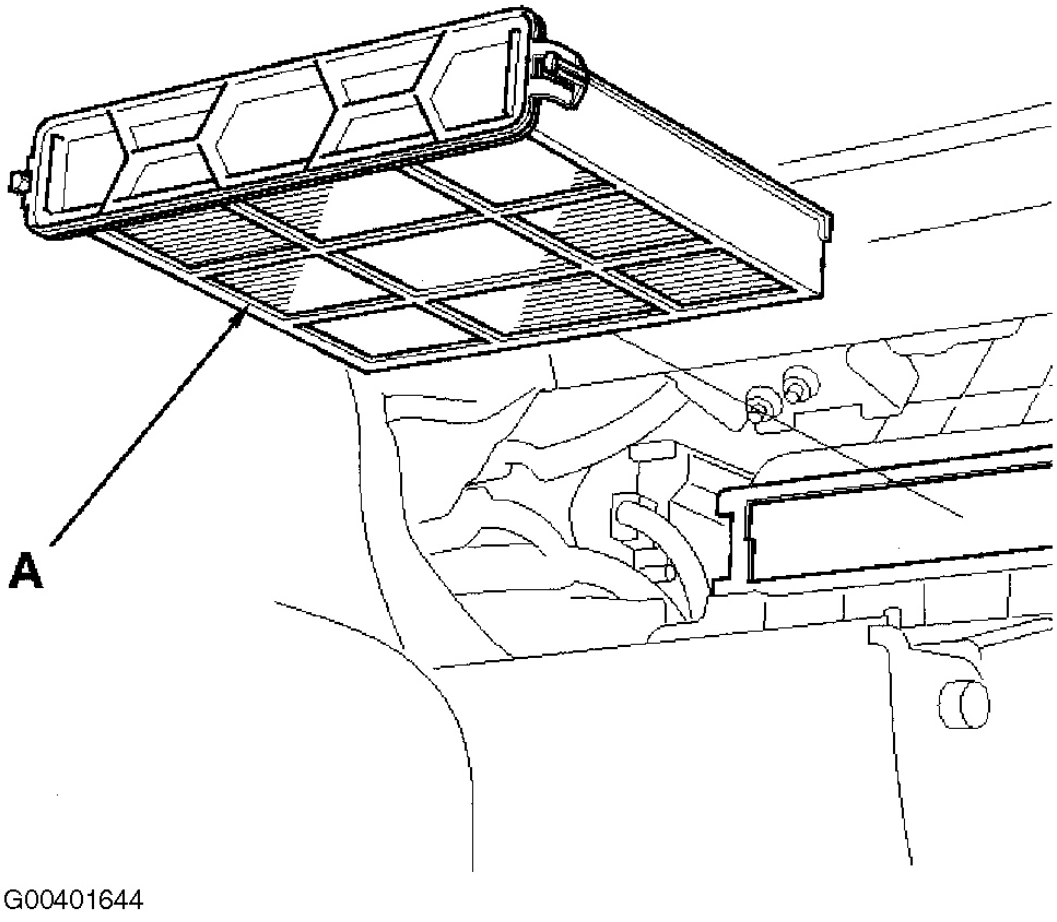

Fig. 2: Removing Dust & Pollen Filter
Courtesy of AMERICAN HONDA MOTOR CO., INC.

3. Remove the filter (A) from the housing (B), and replace the filter. See **Fig. 3**. Install the filter in the reverse order of removal. Make sure that there is no air leaking out of the evaporator.

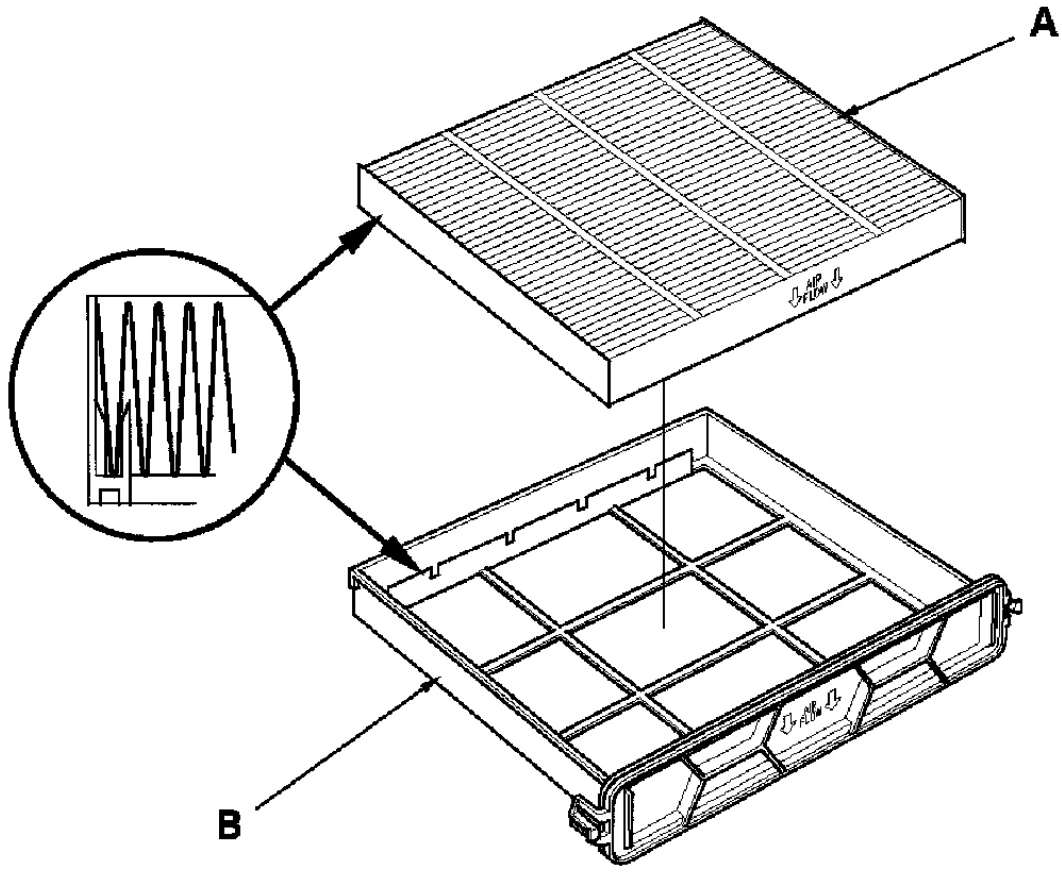

G00401645

Fig. 3: Dust & Pollen Filter Installation Position
Courtesy of AMERICAN HONDA MOTOR CO., INC.

4. If there was a maintenance reminder to replace the dust and pollen filter, reset the maintenance reminder, and this procedure is complete. Maintenance reminder can be reset using a factory scan tool, or equivalent aftermarket scan tool.